DMX512 Controller User Manual



(Please read through this manual carefully before use)

Welcome to use our DMX512 contoller.It is the upgraded version of the BC-100 DMX512 controller, it outputs international standard DMX512/1992 signal, it not only can control all the LED lights in the market as long as it receives standard DMX signal, but also can work with DMX Decoder to control general led lights which do not accept DMX512 signal. this DMX512 Controller has a LCD screen, easy to operate with RF wireless remote control. Built-in real time clock system and a strong DIY & combination function can $a chieve \ abundant \ light \ color \ effect, \ and \ can \ meet \ your \ various \ control \ requirements.$

(2、Specifications)

Model	DMX512 Controller
Working Voltage	DC9V(With adapter)
Output Signal	DMX512
DMX Interface	XLR-3,RJ45, Terminal Block
Working Temp	-20°C-55°C
Dimension	161mmx100mmx30mm
Weight(G.W.)	460g

3、Feature function

- 1. With LCD screen, easy to operate.
- 2, Built-in real time clock system, your program can be set to played in any time. 3、40 built-in patterns, 4 DIY recording modes and 4 combined modes, it can combine hundreds of control patterns.


- 4、Multilevel changing speed, brightness and RGB sequence adjustment for yout choices .
- 5. Output standard DMX512/1990 signal, can control 170 Pixels.
- 6. Support multiple DMX512 connector like XLR-3, RJ45, terminals, easy to use.
- 7. With RF wireless remote control, can choose changing modes and control speed and brightness.


4、Safety warnings

- $1. \ In \ order \ to \ use \ it \ properly \ and \ safety, \ please \ read \ user's \ manual \ carefully \ before \ installation.$ Please don't install this controller in lightening, intense magnetic and high-voltage fields.
 To reduce the risk of component damage and fire caused by short circuit, make sure correct
- connection $4. \, \text{Always be sure to mount this unit in an area that will allow proper ventilation to ensure a} \\$
- fitting temperature.

 5. Don't connect cables with power on; make sure a correct connection and no short circuit
- checked with instrument before power on. 6. Please don't open controller cover and operate if problems occur.

The manual is only suitable for this model; any update is subject to change without prior 5. Dimensions

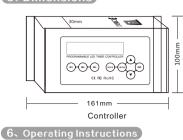

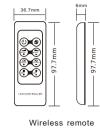

1. Controller and Wireless remote control button instrucinons:





DMX512 Controller DMX512 Controller

Short press function	Long press function (2s)		
Callout saved mode	Save the current mode		
Switch mode, back to previous			
Enter and switch setup	Enter special effect exit setup		
Switch mode, increase current set value	Increase current set value rapidly		
Switch mode, decrease current set value	Decrease current set value rapidly		
Comfirm and enter into next value			
	Callout saved mode Switch mode, back to previous Enter and switch setup Switch mode, increase current set value Switch mode, decrease current set value		

10.	LCE display	Working models	Operation	
1	1. BLACK	Black		
2	2. RED SPEED:8 BRT:8	Red (flicker)	Speed 1 is static color,	
3	3. GREEN SPEED:8 BRT:8	Green (flicker)	speed and brightness are adjustable.	
4	4. BLUE SPEED:8 BRT:8	Bule (flicker)		
5	5. YELLOW SPEED:8 BRT:8	Yellow (flicker)		
6	6. PURPLE SPEED:8 BRT:6	Purple (flicker)		
7	7. CYAN SPEED:8 BRT:8	Cyan (flicker)		
8	8. WHITE SPEED:8 BRT:8	White (flicker)		
9	9. RGB CHANGE SPEED:8 BRT:8	RGB change	Speed and brightness	
10	10. COLOR CHANGE SPEED:8 BRT:8	Color change	are adjustable	
11	11. RG SMOOTH SPEED:6 BRT:8	RG smooth		
12	12. RB SMOOTH SPEED:8 BRT:8	RB smooth		
13	13. GB SMOOTH SPEED:8 BRT:8	GB smooth		
14	14. RGB SMOOTH SPEED:8 BRT:8	RGB smooth		
15	15. COLOR SMOOTH SPEED:8 BRT:8	Color smooth		
16	16. COLOR FADE SPEED:8 BRT:8	Color fade		


				_
17	17. WHITE FADE SPEED:8 BRT:8	White fade		
18	18. RGB CLOSURE SPEED:8 BRT:8 F	RGB fold	Speed, brightness,	
19	19. COLOR CLOSURE SPEED:8 BRT:8 F	Color fold	Forward-reverse adjustable.	
20	20. RGB SPLIT SPEED:8 BRT:8 F	RGB split		
21	21. COLOR SPLIT SPEED:8 BRT:8 F	Color split		
22	22. RGB PILE SPEED:8 BRT:8 F	RGB pile		
23	23. COLOR PILE SPEED:8 BRT:8 F	Color pile		
24	24. RG CHASE SPEED:8 BRT:8 F	RG chase		
25	25. RB CHASE SPEED:8 BRT:8 F	RB chase		
26	26. GB CHASE SPEED:8 BRT:8 F	GB chase		
27	27. RGB CHASE SPEED:8 BRT:8 F	RGB chase		
28	28. COLOR CHASE SPEED:8 BRT:8 F	Color chase		
29	29. RGB SCAN SPEED:8 BRT:8 F	RGB scan		
30	30. COLOR SCAN SPEED:8 BRT:8 F	Color scan		
31	31. RED METEOR SPEED:8 BRT:8 F	Red meteor		
32	32. GREEN METEOR SPEED:8 BRT:8 F	Green meteor		
33	33. BLUE METEOR SPEED:8 BRT:8 F	Blue meteor		
34	34. YELLOW METEOR SPEED:8 BRT:8 F	Yellow meteor		
35	35. PURPLE METEOR SPEED:8 BRT:8 F	Purple meteor		
36	36. CYAN METEOR SPEED:8 BRT:8 F	Cyan meteor		
37	37. WHITE METEOR SPEED:8 BRT:8 F	White meteor		
38	38. COLOR METEOR SPEED:4 BRT:8 F	Color meteor		

DMX512 Controller DMX512 Controller

39	39. RGB FLOW SPEED:8 BRT:8 F	RGB flow			
40	40. COLOR COVER SPEED:8 BRT:8 F	Color cover			
41	41. DIY MODE 1 8 STEPS FADE	DIY mode1	Customizing the color, duration, change type of up to eight steps, the controller can automatically play the changing mode you need, Speed and brightness are		
42	42. DIY MODE 2 8 STEPS FADE	DIY mode2			
43	43. DIY MODE 3 8 STEPS FADE	DIY mode3			
44	44. DIY MODE 4 8 STEPS FADE	DIY mode4	adjustable.		
45	45. GROUP1 MODE 1 MODES ON	Group1 mode	Each Group mode can be combined by up to eight modes which select from		
46	46. GROUP2 MODE 1 MODES ON	Group2 mode			
47	47. GROUP3 MODE 1 MODES ON	Group3 mode	mode 1-44 , speed, brightness and running time		
48	48. GROUP4 MODE 1 MODES ON	Group4 mode	of sub-mode can be set.		
49	49.TIMER MODE ALL TIMER OFF	Timer mode	Up to eight Timer setup, per timer setup can be set as PER DAY, PER DATE or SPE DATE, start time, end time, and running modes from mode 1-48 .when there are multiple timer, the earlier timer will be operated firstly.		

3. Parameter setting

Model	Parameter	Instruction		
2-40	MODE2 SETUP RUN SPEED:8	Running speed, Value 1-8, the higher the value, the faster.		
	MODE2 SETUP RUN BRT:8	Running brightness, value 1-8, the higher the value, the brighter.		
18-40	MODE18 SETUP REVERSE:YES	Running reversed		
41-44	DIY1 STEP1 T:001 R255 G255 B255	T is the duration of per changing steps, value 0-255, 0 indicates skipping this step, the unit time 1s for Fade change, the unit time 0.5 for jump change, F for red value, G for green value, B for blue value is 0-255		
	DIY1 SETUP CHANGE KIND:FADE	Setting the changing types of DIY mode, FADE or JUMP		

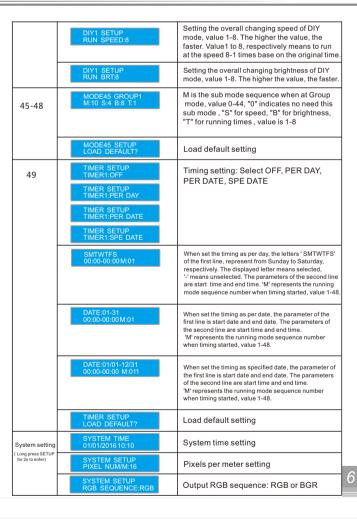

DMX512 Controller DMX512 Controller


								4
SYSTEM SETUP LOAD DEFAULT		Load default setting						
I. Remote operation								
0	ON/OFF	•	MODE+		SPEED+	0	BRT+	

Pixel setting


SPEED-

wireless remote control only support the switch of the first 48 modes, when set the 49th timer mode on the controller, no need remote control . The learnign ID Methood of Remote Control

MODE-

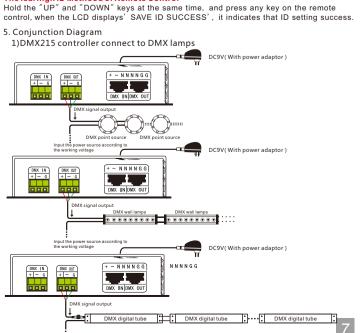



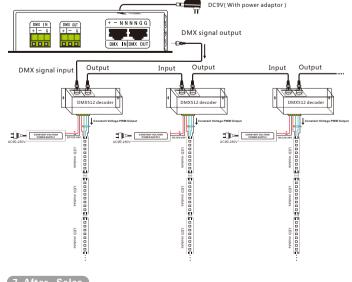

From the day you purchase our products within 3 years, if being used properly in

accordance with the instruction, and quality problems occur, we provide free repair or replacement services except the following cases:

- 1. Any defects caused by wrong operations.
- 2. Any damages caused by inappropriate power supply or abnormal voltage. 3. Any damages caused by unauthorized removal, maintenance, modifying circuit,

humidity environment or near harmful chemicals.

- incorrect connections and replacing chips. 4. Any damages due to transportation, breaking, flooded water after the purchase.
- $5.\,Any\,damages\,caused\,by\,earth quake,\,fire,\,flood,\,lightning\,strike\,etc.\,force\,majeure\,of$ natural disasters. ${\bf 6.\,Any\,damages\,caused\,by\,negligence,inappropriate\,storing\,at\,high\,temperature\,and}\\$